




AC-DC PRO Air Pumps for Everyday Use, Backup and Transport

ACDC-PRO1 Single Output
ACDC-PRO2 Dual Output



INSTRUCTIONS

1. This device is suitable for home aquariums, outdoor fishing, and any application where aeration is beneficial.
2. The AC-DC Pro rechargeable air pump uses a high-quality lithium battery. When AC power is disrupted, it seamlessly switches to DC power to maintain uninterrupted air flow.
3. Installation:

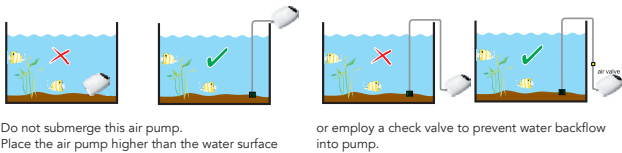

1

FUNCTIONS



This is the power button. Press once to turn on the air pump. Press again and the intermittent light will flash as the pump enters the intermittent mode (cycling 10 seconds on and 10 seconds off). Press the power button one more time to turn off the air pump.



This displays the battery charge state. When this indicates power is low, plug the power cord into the DC 5V adapter power in time to recharge.

TROUBLESHOOTING

CONDITION	INSPECT	SOLUTION
Will not turn on	Is the power supply connected? Is the battery too low.	Connect the power supply and charge the battery.
Reduced air flow	Is the air tube loose or leaking?	Retighten or replace air tubing.
Pump becomes hot	Is the air tubing blocked?	Clear blockage or replace air tube and air stone.
Abnormal sound	Abnormal sound	Isolate the pump from other objects.

1. Use only with standard US voltage 110–120 volts (60 Hz).
2. Do not use if the power cord or plug is damaged.
3. Always disconnect electrical devices from the power before putting hands into the water.
4. Never immerse the air pump. In the event of accidental immersion, disconnect the power cord before reaching in to retrieve it.
5. When using outdoors, avoid exposure to rain or direct sunlight. Keep the pump dry.
6. Regularly replace the air stone to maintain maximum air flow and extend the life of the pump.
7. When not in use, disconnect air tubing and store the pump in a dry, well-ventilated location. Be sure to run the pump for 20 minutes every few days to keep the pump in good working order.
8. When the pump is connected to air tubing, maintain the pump body in a position higher than the surface level of the water. If this is not possible, install a check valve in the air tubing a few inches past the output to prevent backflow of water.

SPECIFICATIONS

Model	Power	Pressure	Flow	Air Outlets	Possible # of airstones
ACDC-PRO1	1 W	3.5 PSI	1.0 l/min	1	1
ACDC-PRO2	1.5 W	3.5 PSI	1.0 l/min	2	2

2

WARRANTY INFORMATION

AQUATOP 1 YEAR LIMITED WARRANTY

Products are warranted by AQUATOP® Aquatic Supplies to the original purchaser against defective material and workmanship under normal use for a period of 1 year from the date of the original purchase. Products have no warranty if: 1.) The product has been serviced, modified or tampered with by anyone other than AQUATOP Aquatic Supplies, 2.) The product has been abused or damaged (including broken or cracked bulbs), and/or 3.) The product has been transported without proper packaging.

WARRANTY LIABILITY DISCLAIMER

In no event will Aquatop® be liable for any consequential or incidental damages, including but not limited to, lost sea life, personal injury, property damage, equipment damage, lost profits, lost wages, lost savings, lost income, etc., arising out of the use of any Aquatop Heater.

For more information on tank health and maintenance as well as other products carried by Aquatop, visit our website: www.aquatop.com

For more information on tank health and maintenance as well as other products carried by Aquatop,

visit our website: www.aquatop.com

775 Columbia St. Brea, CA 92821
Tel: (888) 915-27821 (562) 697-9860

www.aquatop.com
V1 /2024

