

PLATINUM SERIES LIMITED LIFETIME WARRANTY

This warranty covers length of ownership beginning on date of purchase. It is not assignable or transferable to any subsequent purchaser or user. At any time from the date of original purchase, Aquatop, Inc. will repair or replace, at its option, any QPH Platinum Series Aquarium Heater which is deemed defective in workmanship or materials.

Please call 888-915-2782 for return authorization and shipping address.

NOTE: Be certain to wrap heater carefully for protection during shipment. Consumer will bear cost of shipping following completion of service. If the problem is not covered under the terms and conditions of this warranty, the consumer will be notified and given an estimate of repair charges (with all shipping charges billed to consumer). If the estimate is refused, the product will be returned freight collect.

Damage, glass breakage or injuries resulting from negligence or misuse are not covered by this warranty. Loss of fish, personal injury, property loss or damage arising from use of this heater are not covered by this warranty. Incidental or consequential damages are specifically excluded.*

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Consumer must register the product on Aquatop.com and keep the original receipt to be eligible for this Limited Lifetime Warranty.

*Because some states do not allow the exclusion of incidental or consequential damages, this exclusion may not apply to you.

WARRANTY LIABILITY DISCLAIMER

In no event will Aquatop® be liable for any consequential or incidental damages, including but not limited to, lost sea life, personal injury, property damage, equipment damage, lost profits, lost wages, lost savings, lost income, etc., arising out of the use of any Aquatop products.

For more information on tank health and maintenance as well as other products carried by Aquatop,

visit our website: www.aquatop.com

775 Columbia St. Brea, CA 92821
Tel: (888) 915-2782 (562) 697-9860

www.aquatop.com



PLATINUM SERIES QUARTZ GLASS HEATER



INTRODUCTION

Aquatop's Premium Platinum Series Quartz Heaters are made using shatter resistant quartz glass and the analog design makes it simple to use with just the turn of a knob to adjust the temperature to your needs. Each fully submersible heater comes with a simple to use suction cup mounting system, and are available from 50 to 400-watts for fresh and saltwater tanks of various sizes.

FEATURES

- Made with shatter resistant quartz glass
- Easy to adjust top mounted thermostat
- Suction cup mounts included
- Fully submersible
- Suitable for fresh and saltwater aquariums
- Can be mounted vertically or horizontally

WARNINGS & SAFEGUARDS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER: To avoid possible electric shock, special care should be taken in the use of aquarium equipment. For each of the following situations, do not attempt repairs yourself. Return the appliance to an authorized service facility for service or discard the appliance.

1. A. If the appliance shows any sign of abnormal water leakage, immediately unplug it from the power source and discontinue use.
B. Carefully examine the heater after installation. It should not be plugged in if there is water on the inside of the glass tube. This is not intended to be wet.
C. Do not operate an appliance if it has a damaged cord or plug, or if it is malfunctioning or if it is dropped or damaged in any manner.
D. To avoid the possibility of the appliance plug or receptacle getting wet, position aquarium stand and tank to one side of a wall mounted receptacle to prevent water from dripping onto the receptacle or plug. A "drip loop" should be arranged by the user for each cord connecting an aquarium appliance to a receptacle or plug. The "drip loop" is that part of the cord below the level of the receptacle or the connector if an extension cord is used, to prevent water traveling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, DON'T unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then unplug and examine for presence of water in the receptacle.
2. Close supervision is necessary when any appliance is used by or near children.
3. To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.
4. Always unplug a heater from an outlet when not in use, before removing to inspect, and before cleaning. It is best to wait at least 15 minutes after unplugging to allow heater to cool before removing from the aquarium. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
5. Do not use an appliance for other than intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition and will void the warranty.




TIPS

1. Always disconnect the heaters power supply prior to performing any maintenance.
2. Always wait 10-15 minutes before installing or removing the heater. This allows the internal thermometer to acclimate properly.
3. If the heater is cracked and/or has moisture inside it, disconnect it from the power supply.
4. The water level must always be maintained at the minimum water level line.

INSTALLATION

1. Check heater for any signs of damage before use.
2. Attach suction cups to heater at the upper half of the heater, away from heating element.
3. Mount heater inside aquarium using suction cups. Choose a location with good water flow and make note to have water level meet the minimum water level line on the heater.
4. Set heater temperature by simply turning the temperature wheel to desired temperature setting.
5. Wait at least 15 minutes before plugging in your heater.
6. Create a drip loop and then plug into electrical outlet.
7. When light is on, this indicates the heater is on and heating the water.
8. When light is off, this indicates that the water temperature is at the desired setting.

RECOMMENDED PLACEMENT

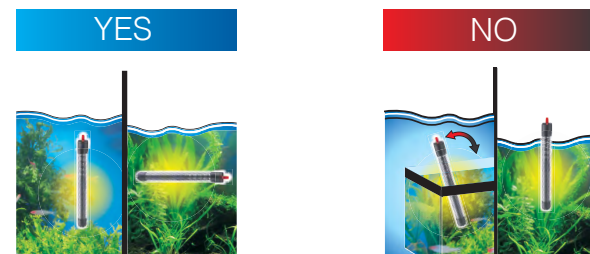

TROUBLESHOOTING

1. Ensure that the power plug is inserted securely.
2. Check that the temperature setting dial is set on the desired temperature.
3. Double check the thermometer setting on the heater by using a separate thermometer. Ensure the separate thermometer is not near the heater. Relocate the thermometer to the opposite end of the tank if needed.
4. Check the ambient room temperature that the tank is located in. If the room temperature is cooler than the heater's set temperature by 10 degrees or more, then a higher wattage heater may be needed.

SPECIFICATIONS

MODEL	POWER	LENGTH	TANK SIZE
QPH-50	50 watt	9in	10 to 15 gallons
QPH-100	100 watt	10in	20 to 30 gallons
QPH-200	200 watt	13in	40 to 60 gallons
QPH-300	300 watt	15in	55 to 100 gallons
QPH-400	400 watt	17in	80 to 130 gallons